

MB 76 セレクター

コンソール MB 76 セレクター ▾

MB 76 セレクター (PGM)

IN

	1-2	3-4	5-6	1-2	3-4	5-6	7	1-2	3-4	5-6	7
OUT 1-2	01	05	09	13							
OUT 3-4	02	06	10	14			04	08	12	16	
OUT 5-6	03	07	11	15							

  

	1-2	3-4	5-6	1-2	3-4	5-6	7	1-2	3-4	5-6	7
OUT 1-2	17			18				19			
OUT 3-4		17		18				19			
OUT 5-6			17	18				19			

MB 76 セレクター (Sys-EX)

IN

	1-2	3-4	5-6	1-2	3-4	5-6	7	1-2	3-4	5-6	7
OUT 1-2	A	E	I	M							
OUT 3-4	B	F	J	N			D	H	L	P	
OUT 5-6	C	G	K	O							

  

	1-2	3-4	5-6	1-2	3-4	5-6	7	1-2	3-4	5-6	7
OUT 1-2	a			b				c			
OUT 3-4		a		b				c			
OUT 5-6			a	b				c			

MB 76 セレクター (PGM)

MB 76 セレクター (Sys-EX)